



Website: <http://cubieboard.org>
E-mail: support@cubietech.com

Cubieboard1-debian-server usage introduce

Version	Author	Auditor
V1.0-Initialize the version	Darren[darren@cubietech.com]	Sam[sam@cubietech.com]

Table of Contents

1. Preface.....	3
1.1. Writing purpose	3
1.2. Using object.....	3
2. Ethernet.....	3
2.1. Connected to the Ethernet.....	3
2.2. Gigabit network.....	3
2.3. Static IP.....	3
3. Display.....	4
3.1. HDMI.....	4
3.2. VGA.....	6
4. TF CARD.....	7
4.1. System boot card.....	7
4.2. Memory card.....	7
5. USB.....	9
5.1. U disk.....	9
5.2. Mouse and keyboard.....	10
6. SATA.....	10
7. Audio.....	11
7.1. HDMI.....	11
7.2. EARPHONE.....	11
8. WIFI	12
9. OTG.....	14
9.1. Flash.....	14
9.2. Host function.....	14
9.3. Device function.....	14
9.4. Power supply	15
10. Keys.....	15
10.1. PWER key	15
10.2. FEL key.....	15
11. IR.....	15
12. LED.....	16
12.1. Blue LED.....	16
12.2. Green LED.....	16
13. RTC.....	17
14. Extension PIN.....	18

1. Preface

1.1. Writing purpose

This document mainly introduced usage of Cubieboard1 debian-server system .

1.2. Using object

Cubieboard1 debian-server system and most of Cubieboard1、Cubieboard2、CubieTruck、Cubieboard4 linux system, include lubuntu and cubieez(debian-desktop) are applicable.

2. Ethernet

2.1. Connected to the Ethernet

Ethernet configuration of all cubieboard are settings for the DHCP by default .Make sure the the router or switches has no problem .Only need connecting Ethernet cable before plug power supply ,the system can get the IP automatically.If not connecting Ethernet cable or get out the cable when running system ,just plug the cable ,wait a few seconds ,the system will automatically connect the Ethernet.

Sometimes maybe need to use following command :

```
$sudo dhclient eth0
```

2.2. Gigabit network

Cubieboard1 cann't support gigabit network. Cubietruck and Cubieboard4 can gigabit network.

2.3. Static IP

Because the DHCP setting ,the IP maybe will change after reboot. Type :

```
$sudo vi /etc/network/interfaces
```



Website: <http://cubieboard.org>
E-mail: support@cubietech.com

Add the following content:

```
auto lo eth0
allow-hotplug eth0
iface lo inet loopback
iface eth0 inet static
```

```
address 192.168.1.x
gateway 192.168.1.1
netmask 255.255.255.0
network 192.168.1.0
broadcast 192.168.1.255
```

```
# interfaces(5) file used by ifup(8) and ifdown(8)
auto lo eth0
allow-hotplug eth0
iface lo inet loopback
iface eth0 inet static

address 192.168.1.88
gateway 192.168.1.1
netmask 255.255.255.0
network 192.168.1.0
broadcast 192.168.1.255
```

"x" change to IP you need ,ensure there is no IP conflict within LAN.Save and exit ,reboot the system .

3. Display

3.1. HDMI

Cubieboard1 only have HDMI displayed output interface. resolution is 720p50 by default .To modify the resolution for 1080p60

If the system in the nand, type

```
#mount /dev/nanda /mnt
#cd /mnt
#bin2fex script.bin sys_config.fex
```

If the system in the TF card, type

```
#mount /dev/mmcblk0p1 /mnt
#cd /mnt
#bin2fex script.bin sys_config.fex
```

vi sys_config.fex

"screen0_output_mode=4" change to "screen0_output_mode=10", meaning 1080p60, save and exit.

```
;-----
;disp init configuration
;
;disp_mode      (0:screen0<screen0_fb0> 1:screen1<screen1_fb0> 2:two_diff_screen_diff_contents<screen0,screen1,fb0,fb1>
;                2:two_same_screen_diff_contents<screen0,screen1,fb0> 4:two_diff_screen_same_contents<screen0,screen1,fb0>)
;screenx_output_type (0:none; 1:lcd; 2:tv; 3:hdm1; 4:vga)
;screenx_output_mode (Used for tv/hdm1 output, 0:480i 1:576i 2:480p 3:576p 4:720p50 5:720p60 6:1080i50 7:1080i60 8:1080p24 9:1080p50 10:1080p60 11:pal 14:ntsc)
;screenx_output_mode (Used for vga output, 0:1680*1050 1:1440*900 2:1366*768 3:1280*1024 4:1024*768 5:800*600 6:640*480 10:1920*1080 11:1280*720)
;fbx format        (4:RGB655 5:RGB565 6:RGB556 7:ARGB1555 8:RGBA5551 9:RGB888 10:RGB8888 12:ARGB4444)
;fbx pixel sequence (0:RGB 1:BGRA 2:ABGR 3:RGBA) --- 0 for linux, 2 for android
;lcd0_bright      (lcd0 int bright,the range:[0,256],default:197
;lcd1_bright      (lcd1 int bright,the range:[0,256],default:197
;-----
[disp_init]
disp_init_enable = 1
disp_mode        = 0

screen0_output_type = 3
screen0_output_mode = 4

screen1_output_type = 0
screen1_output_mode = 4

fb0_width = 1024
fb0_height = 768
fb0_framebuffer_num = 2
fb0_format = 10
fb0_pixel_sequence = 0
fb0_scaler_mode_enable = 1

fb1_width = 1024
fb1_height = 768
fb1_framebuffer_num = 2
fb1_format = 10
fb1_pixel_sequence = 0
fb1_scaler_mode_enable = 0
```

```
#cd /mnt
#fex2bin sys_config.fex script.bin
#cd ~
#umount /mnt
#reboot
```

Reboot the system ,the modification will effective.

3.2. VGA

Cubieboard1 can use Breadboard http://docs.cubieboard.org/addons#cubie_breadboard to extends VGA displayed output, but need to modify the file script.bin

If the system in the nand, type

```
#mount /dev/nanda /mnt
#cd /mnt
#bin2fex script.bin sys_config.fex
```

If the system in the TF card, type

```
#mount /dev/mmcblk0p1 /mnt
#cd /mnt
#bin2fex script.bin sys_config.fex
# vi sys_config.fex
```

"screen0_output_type=3" change to "screen0_output_type=4", meaning VGA display , save and exit.

```
;disp init configuration
;
;disp_mode      (0:screen0<screen0,fb0> 1:screen1<screen1,fb0> 2:two_diff_screen_diff_contents<screen0,screen1,fb0,fb1>
;                3:two_same_screen_diff_contents<screen0,screen1,fb0> 4:two_diff_screen_same_contents<screen0,screen1,fb0>
;screenx_output_type (0:none; 1:lcd; 2:tv; 3:hdmi; 4:vga)
;screenx_output_mode (used for tv/hdmi output, 0:480i 1:576i 2:480p 3:576p 4:720p50 5:720p60 6:1080i50 7:1080i60 8:1080p24 9:1080p50 10:1080p60 11:pal 14:ntsc)
;screenx_output_mode (used for vga output, A:1080*1080 1:1440*900 2:1366*768 3:1280*1024 4:1024*768 5:800*600 6:640*480 10:1920*1080 11:1280*720)
;fbx format      (:RGB655 :RGB565 :RGB56 7:RGB1555 8:RGBA5551 9:RGB8888 10:RGB88888 11:ARGB4444)
;fbx pixel sequence (:ARGB :BGRA :ABGR :RGBA) --- 0 for linux, 2 for android
;lcd0_bright     (lcd0 int bright,the range:[0,256],default:197
;lcd1_bright     (lcd1 int bright,the range:[0,256],default:197
;-----
[disp_init]
disp_init_enable   = 1
disp_mode          = 0
screen0_output_type = 3
screen0_output_mode = 4
screen1_output_type = 0
screen1_output_mode = 4
fb0.width = 1024
fb0.height = 768
fb0.framebuffer_num = 2
fb0.format = 10
fb0.pixel_sequence = 0
fb0.scaler_mode_enable = 1
fb1.width = 1024
fb1.height = 768
fb1.framebuffer_num = 2
fb1.format = 10
fb1.pixel_sequence = 0
fb1.scaler_mode_enable = 0
```

```
#cd /mnt  
#fex2bin sys_config.fex script.bin  
#cd ~  
#umount /mnt  
#reboot
```

Reboot the system ,the modification will effective.

4. TF CARD

TF card is mainly as the system boot card and memory card .

4.1. System boot card

See the make card system documentation .

4.2. Memory card

Using a 16G TF card as example

1. To find the device node,TF card plug in the card slot, in the terminal ,type

```
#fdisk -l
```

If you are using ordinary user ,add "sudo " at the head of the command

```
$sudo fdisk -l
```

```
Disk /dev/mmcblk0: 15.9 GB, 15931539456 bytes
4 heads, 16 sectors/track, 486192 cylinders, total 31116288 sectors
Units = sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disk identifier: 0x00000000

      Device Boot   Start     End   Blocks   Id  System
/dev/mmcblk0p1        2048    26623    12288   83  Linux
/dev/mmcblk0p2     26624  31116287  15544832   83  Linux
```

There is some card information in log ,prove the system has identify card ."/dev/mmcblk0" is device node.Can be seen that TF card has been divide the 13M size sda1 and 15G size sda2 partition.Others is nand flash information.

2. The best you format the new card before use it .In the terminal type

```
#mkfs.vfat /dev/mmcblk0p1
```

The card have formatted as VFAT format that can be recognized by Windows system ,convenient be operated data .The operation format the card as FAT format can be do in the windows system use a card reader .The operation will damage data ,if the card hav used ,you can ignore this chapter .

3. Mount device .

```
#mount /dev/mmcblk0p1 /mnt
```

```
#df
```

```
root@cubieboard:~# mount /dev/mmcblk0p1 /mnt
<4>EXT2-fs (mmcblk0p1): warning: mounting unchecked fs, running e2fsck is recommended
[ 4504.316634] EXT2-fs (mmcblk0p1): warning: mounting unchecked fs, running e2fsck is recommended
root@cubieboard:~#
root@cubieboard:~#
root@cubieboard:~# df
Filesystem      1K-blocks   Used Available Use% Mounted on
rootfs          15300564  935916  13587408   7% /
/dev/root        15300564  935916  13587408   7% /
devtmpfs         503736     0   503736   0% /dev
tmpfs           131072   220   130852   1% /run
tmpfs            5120     0    5120   0% /run/lock
tmpfs           131072     0   131072   0% /run/shm
tmpfs           1048576     4  1048572   1% /tmp
/dev/root        15300564  935916  13587408   7% /var/log.hdd
ramlog-tmpfs     262144   2188   259956   1% /var/log
/dev/mmcblk0p1     11895   6572    4709  59% /mnt
root@cubieboard:~#
```

If has no the wrong log ,prove mount successfully.The hardpoint can be read and write data now.

4. Unmount device .

```
#umount /mnt
```

5. USB

We often use the USB device include U disk , mouse and keyboard.

5.1. U disk

1. To find the device node, insert the USB disk into one of the four USB, in the terminal , type
`#fdisk -l`

If you are using ordinary user ,add "sudo " at the head of the command

`$sudo fdisk -l`

```
Disk /dev/sda: 8040 MB, 8040480256 bytes
136 heads, 53 sectors/track, 2178 cylinders, total 15704063 sectors
Units = sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disk identifier: 0x00000000

Device Boot      Start        End      Blocks   Id  System
/dev/sda1  *     1244928    15704062    7229567+   c  W95 FAT32 (LBA)
```

There is some U disk information in the log , prove the system has recognized U disk.""/dev/sda" is device node. Can be seen that U disk has been divide the sda1 partition.

2. Mount the first partition .

```
#mount /dev/sda1 /mnt
#df
```

```
root@cubieboard:~# mount /dev/sda1 /mnt
root@cubieboard:~#
root@cubieboard:~#
root@cubieboard:~# df
Filesystem      1K-blocks    Used Available Use% Mounted on
rootfs          15300564  935920  13587404   7% /
/dev/root       15300564  935920  13587404   7% /
devtmpfs        503736       0   503736   0% /dev
tmpfs           131072     220   130852   1% /run
tmpfs            5120       0     5120   0% /run/lock
tmpfs           131072       0   131072   0% /run/shm
tmpfs            1048576       4  1048572   1% /tmp
/dev/root       15300564  935920  13587404   7% /var/log.hdd
ramlog-tmpfs    262144     2188   259956   1% /var/log
/dev/sda1        7215440  5887132  1328308  82% /mnt
root@cubieboard:~#
```

If has no the wrong log , prove mount successfully. The hardpoint can be read and write data now.

3. Unmount device.

`#umount /mnt`

5.2. Mouse and keyboard

debian-server support most USB mouse and keyboard. If appear garbled words , you can modify the keyboard configuration according to the following link.

http://docs.cubieboard.org/tutorials/common/set_keyboard_language

6. SATA

Access to the 2.5 inches HDD ,if the HDD make a sound ,prove it is power supply shortage , need to check the power adapter current more than 2A.

Access to the 3.5 inches HDD,need extra power supply 12V to hard disk .Refer to <http://cubieboard.org/2013/09/24/how-to-support-3-5-inch-hdd-on-cubieboard/>

The executable script "/root/sata-install.sh" can formatting SATA hard disk, and copy the rootfs to hard disk .Because the rootfs in the hard disk,the storage space become larger and boot time become fast start-up.

Note : The script will do formatting operation.

7. Audio

7.1. HDMI

Cubieboard1 debian-server audio output is HDMI the default. Can run the following commands to test the audio voice, also can use the player to test it.

`$speaker-test -twav -c2`

7.2. EARPHONE

1. Modify "/etc/asound.conf", switch the sound for earphone voice output.

```
# vi /etc/asound.conf
```

```
pcm.!default {  
    type hw  
    card 1  
    device 0  
}  
ctl.!default {  
    type hw  
    card 1  
}
```

above all "card 1" shoulde be changed to " card 0", and then reboot system.

2. use "speaker-test" test the audio voice

```
$speaker-test -twav -c2
```

```
root@cubieboard:~# speaker-test -twav -c2  
  
speaker-test 1.0.25  
  
Playback device is default  
Stream parameters are 48000Hz, S16_LE, 2 channels  
WAV file(s)  
Rate set to 48000Hz (requested 48000Hz)  
Buffer size range from 4096 to 8192  
Period size range from 1024 to 2048  
Using max buffer size 8192  
Periods = 4  
was set period_size = 2048  
was set buffer_size = 8192  
 0 - Front Left  
 1 - Front Right
```

8. WIFI

Cubieboard1 has no WIFI hardware module, but can insert a USB wireless network card to board to connect the WIFI.

Use MERCURY MW150US 150M mini USB wireless network card as example

1. Loading WIFI driver.

When insert network card to board, system automatically loading WIFI driver.

```
root@cubieboard:~# lsmod
Module           Size  Used by
8188eu          495516  0
g_mass_storage   44283   0
cpufreq_stats    2700   0
mali             108117  0
ump              51112   1 mali
lcd              3701   0
pwm_sunxi        9110   0
gpio_sunxi       8823   0
root@cubieboard:~#
```

In /lib/modules/3.4.79/kernel/drivers/net/wireless can see that many driver of wireless network card, pay attention to the using network card whether has driver.

```
root@cubieboard:~# cd /lib/modules/3.4.79/kernel/drivers/net/wireless
root@cubieboard:/lib/modules/3.4.79/kernel/drivers/net/wireless# ls
at76c50x-usb.ko  hostap      libertas_tf    rt2x00      rtl818x      rtxx7x
ath            iwmc3200wifi mwifiex      rtl8188eu  rtl8192cu  zd1201.ko
bcm4330        libertas     rndis_wlan.ko  rtl8189es  rtl8723as
root@cubieboard:/lib/modules/3.4.79/kernel/drivers/net/wireless#
```

2 . Modify the network configuration .

\$sudo vi /etc/network/interfaces

Add the following content

```
auto wlan0
iface wlan0 inet dhcp
pre-up ip link set wlan0 up
pre-up iwconfig wlan0 essid your-ssid-here
wpa-ssid your-ssid-here
wpa-psk your-passwd-here
```

Note:

your-ssid-here: WIFI name

your-passwd-here: password

Use "ifconfig -a " can the network card information . If wireless network card is the

corresponding wlan1 ,replace wlan0 for wlan1.

3 . Disconnect the ethernet cable and reboot the system .If can't get the IP after reboot ,

```
#ifconfig wlan0 down  
#ifconfig wlan0 up  
#/etc/init.d/networking restart
```

Note : If wireless network card is the corresponding wlan1 ,replace wlan0 for wlan1.

9. OTG

9.1. Flash

The OTG port is used to re-flash image into the nand through a upgrade cable.The re-flash image can boot the system again when the system have been damaged .

9.2. Host function

Using a extend data cable ,OTG port can be expanded into a USB port ,used for connect mouse、 keyboard、 U disk .

9.3. Device function

Using a OTG cable ,connect the OTG port and USB port of PC host ,can mount the storage partition on PC host like the U disk ,achieve read and write data . The default mount the first partition of storage partition ,can change the partition you want to mount .

To mount U disk or HDD ,type :

```
#rmmod g_mass_storage  
#modprobe g_mass_storage file=/dev/sda1 removable=yes stall=0
```

To mount partition 2 of nand flash ,type :

```
#rmmod g_mass_storage  
#modprobe g_mass_storage file=/dev/nandb removable=yes stall=0
```

Note :

- 1)When mount the /dev/nandb or /dev/mmcblk0p2 on PC host ,should insert the OTG cable before execute the command ,Otherwise will damage the rootfs (file system in / dev/nandb or /dev/mmcblk0p2),lead to fail mount operation .Mount the first partition (/dev/nanda or /dev/mmcblk0p1 has no such problem.
- 2)To mount the storage partition on the Windows ,the storage partition should be formatting format that can be recognized by Windows system .
- 3)Don't execute the command : modprobe g_mass_storage file=/dev/* removable=y stall=0 which will damage the rootfs system .
- 4)When OTG cable be inserted the board ,it is maybe appear didn't reflect possible case in PC host .Keep inserting OTG cable ,use above command to unload the driver and reload the driver to solve the problem .Or try to dial the plug cable once or twice.

9.4. Power supply

Using a OTG cable ,connet the OTG port and USB port of PC host ,can play a role of temporary power supply .The current of USB port only a few hundred ma ,which mayby cause the system not stable and power supply shortage .So it is no recommend use OTG port power supply .

10. Keys

10.1. PWER key

Long press PWER key more than 6s will cause power outages when the system is running . Long press PWER key more than 1s will cause automatically boot when the system is power off."pmu1_para" configuration define the PWER key power outages and boot time in "sys_config.fex".

10.2. FEL key

When flash the nand flash image ,press the FEL key ,insert the OTG cable to enter the flash

mode .For more ,see the flash image document.

11. IR

The IR driver has been loading by default . Tpye :

```
# keybinder /dev/input/event0
```

Press the infrared remote controler,print as the figure below:

```
root@cubieboard:~# keybinder /dev/input/event0
Reading key input from /dev/input/event0 (sunxi-ir)
Loaded config items
Keycode 85 pressed
Keycode 85 pressed
```

By above may know,the keycode of pressed key is "85".Know the keycode ,you can use it to execute the command .For example :

```
#echo "85,shutdown -h now" >>/etc/keybinder.conf
```

The keycode of the key is "85", command is "shutdown -h now",or directly modify the "/etc/keybinder.conf" ,add several configuration in it .Press the keys ,can execute the command.

12. LED

12.1. Blue LED

Trigger of blue led is defined as "heartbeat",used for indicator system is running .

```
# cat /sys/class/leds/blue\:ph21\:led2/trigger
none battery-charging-or-full battery-charging battery-full battery-charging-blink-full-solid ac-
online usb-online mmc0 timer [heartbeat] backlight gpio cpu0 cpu1 default-on
```

Turn off LED

```
#echo none > /sys/class/leds/blue\:ph21\:led2/trigger
```



Website: <http://cubieboard.org>
E-mail: support@cubietech.com

```
#echo 0 > /sys/class/leds/blue\::ph21\::led2/brightness
```

Turn on LED

```
#echo none > /sys/class/leds/blue\::ph21\::led2/trigger  
#echo 1 > /sys/class/leds/blue\::ph21\::led2/brightness
```

12.2. Green LED

Trigger of greed led is defined as "none" and normally on .Users can custom.

```
#cat /sys/class/leds/green\::ph20\::led1/trigger
```

[none] battery-charging-or-full battery-charging battery-full battery-charging-blink-full-solid ac-online usb-online mmc0 timer heartbeat backlight gpio cpu0 cpu1 default-on

Turn off LED

```
# echo none > /sys/class/leds/green\::ph20\::led1/trigger  
# echo 0 > /sys/class/leds/green\::ph20\::led1/brightness
```

Turn on LED

```
#echo none > /sys/class/leds/green\::ph20\::led1/trigger  
#echo 1 > /sys/class/leds/green\::ph20\::led1/brightness
```

Other trigger: "timer "(timing flashing) 、 "mmc0" (flashing once when insert the TF card) 、 "battery-charging" 、 " battery-full " and so on .

Warning :the modification will change to the default configuration after the reboot ,you can write the above command into "/etc/init.d/rcS " ,or modify "leds_para" section in the file name "sys_config.fex ".

13. RTC

Cubieboard1 has no hardware RTC on the . After reboot, the time starts from the default time to go.Connected to Internet the system time will automatically update the calibration.

Manually update the system time :



Website: <http://cubieboard.org>
E-mail: support@cubietech.com

Change to 11 o'clock 11 minutes 11 seconds


`#date -s 11:11:11`

Change the date on November 11, 2011

`#date -s 20111111`

14. Extension PIN

http://docs.cubieboard.org/cubieboard1_and_cubieboard2_gpio_pin

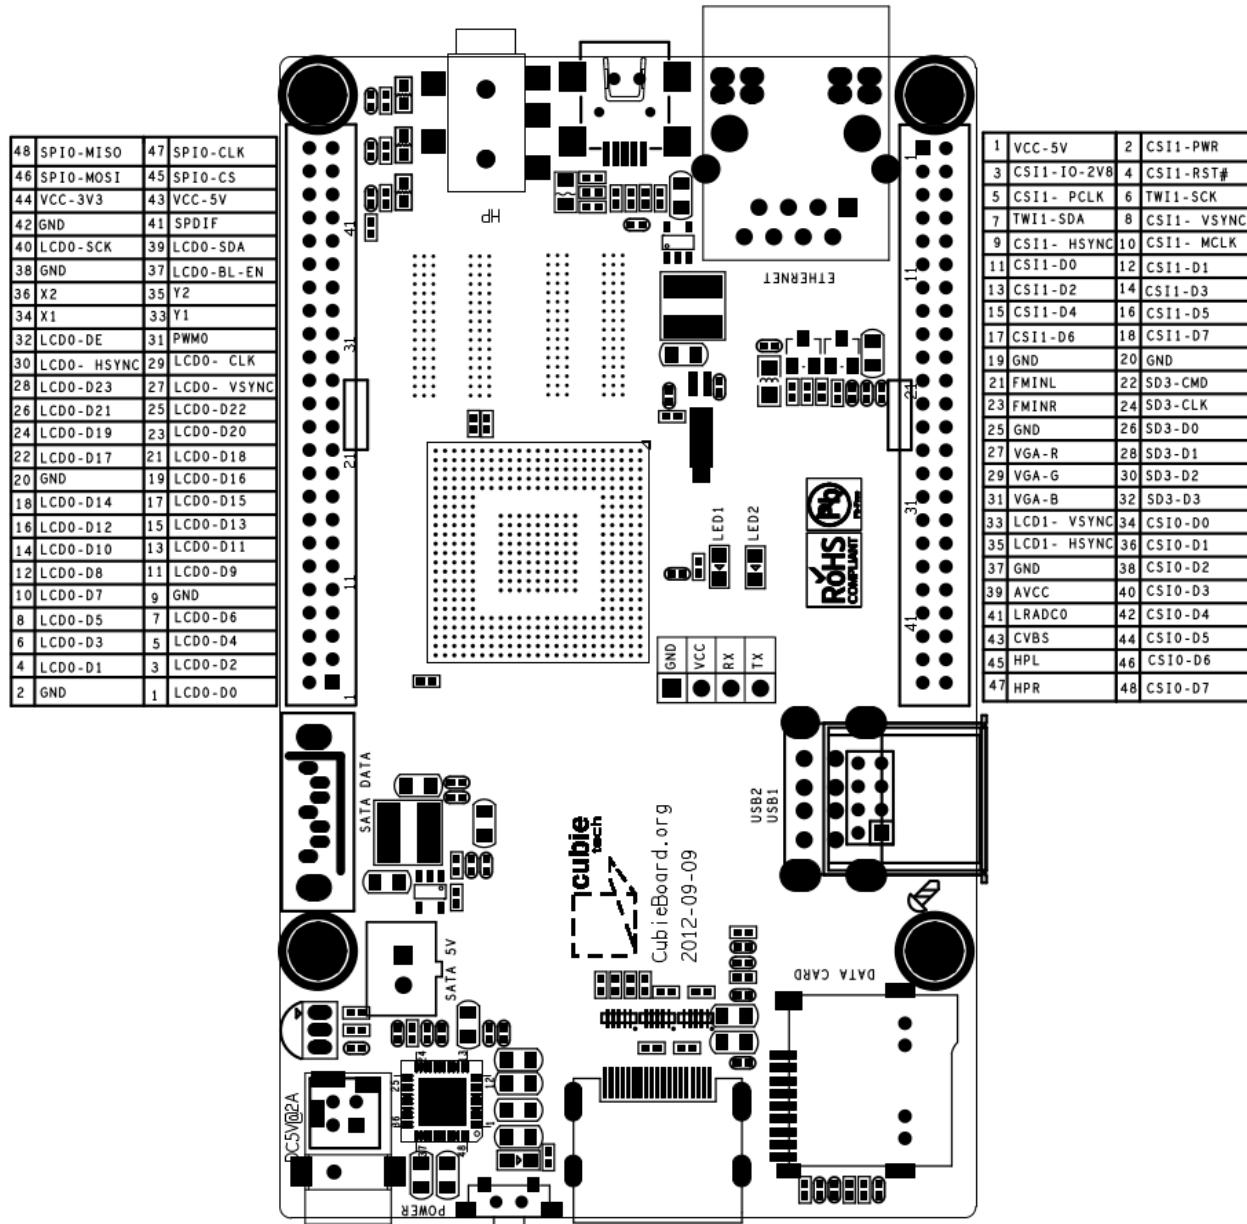

U14 (Next to SATA connector)
 SPI0

48 PI13 (SPI0-MISO/UART6-RX/EINT25)

46 PI12 (SPI0-MOSI/UART6-TX/EINT24)

44 3.3V (nc in 2012-08-08)

42 Ground

40 PB10 (LCD0-SCK/LCD-PIO1)

38 Ground

36 XN_TP (TP-X2)

34 XP_TP (TP-X1)

32 PD25 (LCDDE)

30 PD26 (LCDHSYNC)-VGA-HSYNC

28 PD23 (LCDD23)

26 PD21 (LCDD21)

24 PD19 (LCDD19/LVDS1N3)

22 PD17 (LCDD17/LVDS1NC)

20 Ground

18 PD14 (LCDD14/LVDS1P2)

16 PD12 (LCDD12/LVDS1P1)

14 PD10 (LCDD10/LVDS1P0)

12 PD8 (LCDD8/LVDS0P3)

10 PD7 (LCDD7/LVDS0NC)

8 PD5 (LCDD5/LVDS0N2)

6 PD3 (LCDD3/LVDS0N1)

4 PD1 (LCDD1/LVDS0N0)

2 Ground

47 PI11 (SPI0-CLK/UART5-RX/EINT23)

45 PI10 (SPI0-CS/UART5-TX/EINT22)

LCD

43 VCC-5V

41 SPDIF

39 PB11 (LCD0-SDA/LCD-PIO2)

37 PH7 (LCD0-BL-EN/LCD-PIO0/UART5-RX/EINT7)

35 YN_TP (TP-Y2)

33 YP_TP (TP-Y1)

31 PB2 (PWM0)

29 PD24 (LCDCLK)

27 PD27 (LCDVSYNC)-VGA-VSYNC

25 PD22 (LCDD22)

23 PD20 (LCDD20)

21 PD18 (LCDD18/LVDS1P3)

19 PD16 (LCDD16/LVDS1PC)

17 PD15 (LCDD15/LVDS1N2)

15 PD13 (LCDD13/LVDS1N1)

13 PD11 (LCDD11/LVDS1N0)

11 PD9 (LCDD9/LVDS0N3)

9 Ground

7 PD6 (LCDD6/LVDS0PC)

5 PD4 (LCDD4/LNVS0P2)

3 PD2 (LCDD2/LVDS0P1)

1 PD0 (LCDD0/LVDSP0)

U15 (Between Ethernet port and USB ports)

CSI1/TS

1	VCC-5V	2	PH15 (CSI1-PWR/EINT15)
3	CSI1-IO-2V8	4	PH14 (CSI1-RST#/EINT14)
5	PG0 (CSI1-PCLK/SDC1-CMD)	6	PB18 (TWI1-SCK)
7	PB19 (TWI1-SDA)	8	PG3 (CSI1-VSYNC/SDC1-D1)
9	PG2 (CSI1-HSYNC/SDC1-D0)	10	PG1 (CSI1-MCLK/SDC1-CLK)
11	PG4 (CSI1-D0/SDC1-D2)	12	PG5 (CSI1-D1/SDC1-D3)
13	PG6 (CSI1-D2/UART3-TX)	14	PG7 (CSI1-D3/UART3-RX)
15	PG8 (CSI1-D4/UART3-RTS)	16	PG9 (CSI1-D5/UART3-CTS)
17	PG10 (CSI1-D6/UART4-TX)	18	PG11 (CSI1-D7/UART4-RX)
19	Ground	20	Ground
Analog			
21	FMINL	22	PI4 (SDC3-CMD)
23	FMINR	24	PI5 (SDC3-CLK)
25	Ground	26	PI6 (SDC3-D0)
27	VGA-R	28	PI7 (SDC3-D1)
29	VGA-G	30	PI8 (SDC3-D2)
31	VGA-B	32	PI9 (SDC3-D3)
CSI0/TS			
33	LCD1-VSYNC	34	PE4 (CSI0-D0)
35	LCD1-HSYNC	36	PE5 (CSI0-D1)
37	Ground	38	PE6 (CSI0-D2)
39	AVCC	40	PE7 (CSI0-D3)
41	LRADC0	42	PE8 (CSI0-D4)
43	CVBS	44	PE9 (CSI0-D5)
45	HPL	46	PE10 (CSI0-D6)
47	HPR	48	PE11 (CSI0-D7)