



Website: <http://cubieboard.org>  
E-mail: [support@cubietech.com](mailto:support@cubietech.com)

---

## Cubieboard2-debian-server usage introduce

Version	Author	Auditor
V1.0-Initialize the version	Darren[darren@cubietech.com]	Sam[sam@cubietech.com]

---

## Table of Contents

1. Preface.....	3
1.1. Writing purpose .....	3
1.2. Using object.....	3
2. Ethernet.....	3
2.1. Connected to the Ethernet.....	3
2.2. Gigabit network.....	3
2.3. Static IP.....	3
3. Display.....	4
3.1. HDMI.....	4
3.2. VGA.....	6
4. TF CARD.....	7
4.1. System boot card.....	7
4.2. Memory card.....	7
5. USB.....	9
5.1. U disk.....	9
5.2. Mouse and keyboard.....	10
6. SATA.....	11
7. Audio.....	11
7.1. HDMI.....	11
7.2. EARPHONE.....	11
8. WIFI .....	12
9. OTG.....	14
9.1. Flash.....	14
9.2. Host function.....	14
9.3. Device function.....	14
9.4. Power supply .....	15
10. Keys.....	15
10.1. PWER key .....	15
10.2. FEL key.....	15
11. IR.....	15
12. LED.....	16
12.1. Blue LED.....	16
12.2. Green LED.....	16
13. RTC.....	17
14. Extension PIN.....	18

## 1. Preface

### 1.1. Writing purpose

This document mainly introduced usage of Cubieboard2 debian-server system .

### 1.2. Using object

Cubieboard2 debian-server system and most of Cubieboard1、Cubieboard2、CubieTruck、Cubieboard4 linux system, include lubuntu and cubeez(debian-desktop ) are applicable.

## 2. Ethernet

### 2.1. Connected to the Ethernet

Ethernet configuration of all cubieboard are settings for the DHCP by default .Make sure the the router or switches has no problem .Only need connecting Ethernet cable before plug power supply ,the system can get the IP automatically.If not connecting Ethernet cable or get out the cable when running system ,just plug the cable ,wait a few seconds ,the system will automatically connect the Ethernet.

Sometimes maybe need to use following command :

```
$sudo dhclient eth0
```

### 2.2. Gigabit network

Cubieboard2 cann't support gigabit network. Cubietruck and Cubieboard4 can gigabit network.

### 2.3. Static IP

Because the DHCP setting ,the IP maybe will change after reboot. Type :

```
$sudo vi /etc/network/interfaces
```



Website: <http://cubieboard.org>  
E-mail: [support@cubietech.com](mailto:support@cubietech.com)

---

Add the following content:

```
auto lo eth0
allow-hotplug eth0
iface lo inet loopback
iface eth0 inet static
```

```
address 192.168.1.x
gateway 192.168.1.1
netmask 255.255.255.0
network 192.168.1.0
broadcast 192.168.1.255
```

```
# interfaces(5) file used by ifup(8) and ifdown(8)
auto lo eth0
allow-hotplug eth0
iface lo inet loopback
iface eth0 inet static

address 192.168.1.88
gateway 192.168.1.1
netmask 255.255.255.0
network 192.168.1.0
broadcast 192.168.1.255
```

"x" change to IP you need ,ensure there is no IP conflict within LAN.Save and exit ,reboot the system .

## 3. Display

### 3.1. HDMI

Cubieboard2 only have HDMI displayed output interface. resolution is 720p50 by default .To modify the resolution for 1080p60

If the system in the nand, type

```
#mount /dev/nanda /mnt
#cd /mnt
#bin2fex script.bin sys_config.fex
```

If the system in the TF card, type

```
#mount /dev/mmcblk0p1 /mnt
#cd /mnt
#bin2fex script.bin sys_config.fex
```

# vi sys\_config.fex

"screen0\_output\_mode=4" change to "screen0\_output\_mode=10", meaning 1080p60, save and exit.

```
;-----
;disp init configuration
;
;disp_mode      (0:screen0<screen0_fb0> 1:screen1<screen1_fb0> 2:two_diff_screen_diff_contents<screen0,screen1,fb0,fb1>
;                2:two_same_screen_diff_contents<screen0,screen1,fb0> 4:two_diff_screen_same_contents<screen0,screen1,fb0>)
;screenx_output_type (0:none; 1:lcd; 2:tv; 3:hdm1; 4:vga)
;screenx_output_mode (Used for tv/hdm1 output, 0:480i 1:576i 2:480p 3:576p 4:720p50 5:720p60 6:1080i50 7:1080i60 8:1080p24 9:1080p50 10:1080p60 11:pal 14:ntsc)
;screenx_output_mode (Used for vga output, 0:1680*1050 1:1440*900 2:1366*768 3:1280*1024 4:1024*768 5:800*600 6:640*480 10:1920*1080 11:1280*720)
;fbx format        (4:RGB655 5:RGB565 6:RGB556 7:ARGB1555 8:RGBA5551 9:RGB888 10:RGB8888 12:ARGB4444)
;fbx pixel sequence (0:RGB 1:BGRA 2:ABGR 3:RGBA) --- 0 for linux, 2 for android
;lcd0_bright      (lcd0 int bright,the range:[0,256],default:197
;lcd1_bright      (lcd1 int bright,the range:[0,256],default:197
;-----
[disp_init]
disp_init_enable = 1
disp_mode        = 0

screen0_output_type = 3
screen0_output_mode = 4

screen1_output_type = 0
screen1_output_mode = 4

fb0_width = 1024
fb0_height = 768
fb0_framebuffer_num = 2
fb0_format = 10
fb0_pixel_sequence = 0
fb0_scaler_mode_enable = 1

fb1_width = 1024
fb1_height = 768
fb1_framebuffer_num = 2
fb1_format = 10
fb1_pixel_sequence = 0
fb1_scaler_mode_enable = 0
```

```
#cd /mnt
#fex2bin sys_config.fex script.bin
#cd ~
#umount /mnt
#reboot
```

Reboot the system ,the modification will effective.



Website: <http://cubieboard.org>  
E-mail: [support@cubietech.com](mailto:support@cubietech.com)

---

### 3.2. VGA

Cubieboard2 can use Breadboard [http://docs.cubieboard.org/addons#cubie\\_breadboard](http://docs.cubieboard.org/addons#cubie_breadboard) to extends VGA displayed output, but need to modify the file script.bin

If the system in the nand, type

```
#mount /dev/nanda /mnt  
#cd /mnt  
#bin2fex script.bin sys_config.fex
```

If the system in the TF card, type

```
#mount /dev/mmcblk0p1 /mnt  
#cd /mnt  
#bin2fex script.bin sys_config.fex
```

```
# vi sys_config.fex
```

"screen0\_output\_type=3" change to "screen0\_output\_type=4", meaning VGA display , save and exit.

```
;-----  
;disp init configuration  
;  
;disp_mode          (0:screen0<screen0,fb0> 1:screen1<screen1,fb0> 2:two_diff_screen_diff_contents<screen0,screen1,fb0,fb1>  
;                   3:two_same_screen_diff_contents<screen0,screen1,fb0> 4:two_diff_screen_same_contents<screen0,screen1,fb0>)  
;screenx_output_type (0:none; 1:lcd; 2:tv; 3:hDMI; 4:vga)  
;screenx_output_mode (used for tv/hDMI output, 0:480i 1:576i 2:480p 3:576p 4:720p50 5:720p60 6:1080i50 7:1080i60 8:1080p24 9:1080p50 10:1080p60 11:pal 14:ntsc)  
;screenx_output_mode (used for vga output, 0:1080*1050 1:1440*900 2:1366*768 3:1280*1024 4:1024*768 5:800*600 6:940*480 7:1920*1080 11:1280*720)  
;fbx format         (1:RGB655 2:RGB565 3:RGB56 7:ARGB1555 8:RGBAS551 9:RGB8888 10:ARGB8888 12:ARGB4444)  
;fbx pixel sequence (0:ARGB 1:BGRA 2:ABGR 3:RGBA) --- 0 for linux, 2 for android  
;lcd0_bright        (lcd0 init bright,the range:[0,256],default:197  
;lcd1_bright        (lcd1 init bright,the range:[0,256],default:197  
;  
[disp_init]  
disp_init_enable     = 1  
disp_mode            = 0  
  
screen0_output_type   = 3  
screen0_output_mode    = 4  
  
screen1_output_type   = 0  
screen1_output_mode    = 4  
  
fb0_width             = 1024  
fb0_height            = 768  
fb0_framebuffer_num   = 2  
fb0_format             = 10  
fb0_pixel_sequence     = 0  
fb0_scaler_mode_enable = 1  
  
fb1_width             = 1024  
fb1_height            = 768  
fb1_framebuffer_num   = 2  
fb1_format             = 10  
fb1_pixel_sequence     = 0  
fb1_scaler_mode_enable = 0
```

```
#cd /mnt  
#fex2bin sys_config.fex script.bin  
#cd ~  
#umount /mnt  
#reboot
```

Reboot the system ,the modification will effective.

## 4. TF CARD

TF card is mainly as the system boot card and memory card .

### 4.1. System boot card

See the make card system documentation .

### 4.2. Memory card

Using a 16G TF card as example

1. To find the device node,TF card plug in the card slot, in the terminal ,type

```
#fdisk -l
```

If you are using ordinary user ,add "sudo " at the head of the command

**\$sudo fdisk -l**

```
Disk /dev/mmcblk0: 15.9 GB, 15931539456 bytes
4 heads, 16 sectors/track, 486192 cylinders, total 31116288 sectors
Units = sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disk identifier: 0x00000000

      Device Boot   Start     End   Blocks Id System
/dev/mmcblk0p1        2048    26623    12288  83 Linux
/dev/mmcblk0p2    26624  31116287  15544832  83 Linux
```

There is some card information in log ,prove the system has identify card ."/dev/mmcblk0" is device node.Can be seen that TF card has been divide the 13M size sda1 and 15G size sda2 partition.Others is nand flash information.

2. The best you format the new card before use it .In the terminal type

**#mkfs.vfat /dev/mmcblk0p1**

The card have formatted as VFAT format that can be recognized by Windows system ,convenient be operated data .The operation format the card as FAT format can be do in the windows system use a card reader .The operation will damage data ,if the card hav used ,you can ignore this chapter .

3. Mount device .

**#mount /dev/mmcblk0p1 /mnt**

**#df**

```
root@cubieboard2:~# mount /dev/mmcblk0p1 /mnt
root@cubieboard2:~#
root@cubieboard2:~#
root@cubieboard2:~# df
Filesystem      1K-blocks   Used Available Use% Mounted on
rootfs          15318652  706012  13983584   5% /
/dev/root       15318652  706012  13983584   5% /
devtmpfs        406648      0    406648   0% /dev
tmpfs           131072     164    130908   1% /run
tmpfs            5120      0     5120   0% /run/lock
tmpfs           131072      0    131072   0% /run/shm
tmpfs           1048576      4   1048572   1% /tmp
/dev/root       15318652  706012  13983584   5% /var/log.hdd
ramlog-tmpfs    262144    1976    260168   1% /var/log
/dev/mmcblk0p1    11895    4671      6610  42% /mnt
root@cubieboard2:~#
```

If has no the wrong log ,prove mount successfully.The hardpoint can be read and write data now.

#### 4. Unmount device .

```
#umount /mnt
```

## 5. USB

We often use the USB device include U disk , mouse and keyboard.

### 5.1. U disk

1. To find the device node,insert the USB disk into one of the four USB,in the terminal ,type

```
#fdisk -l
```

If you are using ordinary user ,add "sudo " at the head of the command

```
$sudo fdisk -l
```

```
Disk /dev/sda: 8040 MB, 8040480256 bytes
136 heads, 53 sectors/track, 2178 cylinders, total 15704063 sectors
Units = sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disk identifier: 0x00000000

Device Boot      Start        End      Blocks   Id  System
/dev/sda1  *      1244928  15704062  7229567+   c  W95 FAT32 (LBA)
```

There is some U disk information in the log ,prove the system has recognized U disk."/dev/sda" is device node.Can be seen that U disk has been divide the sda1partition.

## 2. Mount the first partition .

```
#mount /dev/sda1 /mnt
```

```
#df
```

```
root@cubieboard2:~# mount /dev/sda1 /mnt
root@cubieboard2:~#
root@cubieboard2:~#
root@cubieboard2:~#
root@cubieboard2:~# df
Filesystem      1K-blocks    Used Available Use% Mounted on
rootfs          15300564  840112   13683212   6% /
/dev/root       15300564  840112   13683212   6% /
devtmpfs        406648      0    406648   0% /dev
tmpfs           131072     172    130900   1% /run
tmpfs            5120      0     5120   0% /run/lock
tmpfs           131072      0    131072   0% /run/shm
tmpfs           1048576      4   1048572   1% /tmp
/dev/root       15300564  840112   13683212   6% /var/log.hdd
ramlog-tmpfs    262144    2488    259656   1% /var/log
/dev/sda1        7215440  5886852   1328588  82% /mnt
root@cubieboard2:~#
```

If has no the wrong log ,prove mount successfully.The hardpoint can be read and write data now.

## 3. Unmount device.

```
#umount /mnt
```

## 5.2. Mouse and keyboard

debian-server support most USB mouse and keyboard.If appear garbled words , you can modify the keyboard configuration according to the following link.

[http://docs.cubieboard.org/tutorials/common/set\\_keyboard\\_language](http://docs.cubieboard.org/tutorials/common/set_keyboard_language)

## 6. SATA

Access to the 2.5 inches HDD ,if the HDD make a sound ,prove it is power supply shortage , need to check the power adapter current more than 2A.

Access to the 3.5 inches HDD,need extra power supply 12V to hard disk .Refer to <http://cubieboard.org/2013/09/24/how-to-support-3-5-inch-hdd-on-cubieboard/>

The executable script "/root/sata-install.sh" can formatting SATA hard disk, and copy the rootfs to hard disk .Because the rootfs in the hard disk,the storage space become larger and boot time become fast start-up.

**Note :** The script will do formatting operation.

## 7. Audio

### 7.1. HDMI

Cubieboard2 debian-server audio output is HDMI the default.Can run the following commands to test the audio voice, also can use the player to test it.

\$speaker-test -twav -c2

### 7.2. EARPHONE

1. Modify "/etc/asound.conf", switch the sound for earphone voice output.

```
# vi /etc/asound.conf
pcm.!default {
    type hw
    card 1
    device 0
}
ctl.!default {
    type hw
    card 1
}
```

---

above all "card 1 "shoulde be changed to " card 0", and then reboot system.

2. use "speaker-test" test the audio voice

```
$speaker-test -twav -c2
```

```
root@cubieboard2:~# speaker-test -twav -c2
speaker-test 1.0.25

Playback device is default
Stream parameters are 48000Hz, S16_LE, 2 channels
WAV file(s)
Rate set to 48000Hz (requested 48000Hz)
Buffer size range from 4096 to 8192
Period size range from 1024 to 2048
Using max buffer size 8192
Periods = 4
was set period_size = 2048
was set buffer_size = 8192
 0 - Front Left
 1 - Front Right
```

## 8. WIFI

Cubieboard2 has no WIFI hardware module, but can insert a USB wireless network card to board to connect the WIFI.

Use MERCURY MW150US 150M mini USB wireless network card as example

1. Loading WIFI driver.

When insert network card to board, system automatically loading WIFI driver.

```
root@cubieboard2:~# lsmod
Module           Size  Used by
8188eu          502089  0
g_mass_storage   43190  0
bnep            14265  2
rfcomm           58449  0
cpufreq_stats    3675  0
bluetooth        265092  10 bnep,rfcomm
mali             111408  0
ump              51020  1 mali
lcd               3630  0
pwm_sunxi        8987  0
gpio_sunxi       8910  0
```

In /lib/modules/3.4.79/kernel/drivers/net/wireless can see that many driver of wireless network

---

card, pay attention to the using network card whether has driver.

```
root@cubieboard2:/lib/modules/3.4.79/kernel/drivers/net/wireless# ls
at76c50x-usb.ko  libertas      rndis_wlan.ko  rtl818x      wl1251
ath            libertas_tf   rt2x00        rtl8192cu  wl12xx
hostap          mwifiex     rtl8188eu     rtl8723as zd1201.ko
iwmc3200wifi    p54        rtl8189es     rtl8723as zd1211rw
root@cubieboard2:/lib/modules/3.4.79/kernel/drivers/net/wireless#
```

## 2 . Modify the network configuration .

**\$sudo vi /etc/network/interfaces**

Add the following content

```
auto wlan0
iface wlan0 inet dhcp
pre-up ip link set wlan0 up
pre-up iwconfig wlan0 essid your-ssid-here
wpa-ssid your-ssid-here
wpa-psk your-passwd-here
```

### Note:

your-ssid-here: WIFI name

your-passwd-here: password

Use "ifconfig -a " can the network card information .If wireless network card is the corresponding wlan1 ,replace wlan0 for wlan1.

## 3 . Disconnect the ethernet cable and reboot the system .If can't get the IP after reboot ,

```
#ifconfig wlan0 down
#ifconfig wlan0 up
#/etc/init.d/networking restart
```

**Note :** If wireless network card is the corresponding wlan1 ,replace wlan0 for wlan1.

## 9. OTG

### 9.1. Flash

The OTG port is used to re-flash image into the nand through a upgrade cable. The re-flash image can boot the system again when the system has been damaged.

### 9.2. Host function

Using an extend data cable, OTG port can be expanded into a USB port, used for connecting mouse, keyboard, U disk.

### 9.3. Device function

Using an OTG cable, connect the OTG port and USB port of PC host, can mount the storage partition on PC host like the U disk, achieve read and write data. The default mounts the first partition of storage partition, can change the partition you want to mount.

To mount U disk or HDD, type :

```
#rmmod g_mass_storage  
#modprobe g_mass_storage file=/dev/sda1 removable=yes stall=0
```

To mount partition 2 of nand flash, type :

```
#rmmod g_mass_storage  
#modprobe g_mass_storage file=/dev/nandb removable=yes stall=0
```

Note :

1) When mounting the /dev/nandb or /dev/mmcblk0p2 on PC host, should insert the OTG cable before executing the command, otherwise it will damage the rootfs (file system in /dev/nandb or /dev/mmcblk0p2), leading to failed mount operation. Mounting the first partition (/dev/nanda or /dev/mmcblk0p1) has no such problem.

2) To mount the storage partition on the Windows, the storage partition should be formatted with a format that can be recognized by the Windows system.

3)Don't execute the command : modprobe g\_mass\_storage file=/dev/\* removable=y stall=0 which will damage the rootfs system .

4)When OTG cable be inserted the board ,it is maybe appear didn't reflect possible case in PC host .Keep inserting OTG cable ,use above command to unload the driver and reload the driver to solve the problem .Or try to dial the plug cable once or twice.

## 9.4. Power supply

Using a OTG cable ,connet the OTG port and USB port of PC host ,can play a role of temporary power supply .The current of USB port only a few hundred ma ,which mayby cause the system not stable and power supply shortage .So it is no recommend use OTG port power supply .

# 10. Keys

## 10.1. PWER key

Long press PWER key more than 6s will cause power outages when the system is running . Long press PWER key more than 1s will cause automatically boot when the system is power off."pmu1\_para" configuration define the PWER key power outages and boot time in "sys\_config.fex".

## 10.2. FEL key

When flash the nand flash image ,press the FEL key ,insert the OTG cable to enter the flash mode .For more ,see the flash image document.

# 11. IR

The IR driver has been loading by default . Tpye :

```
# keybinder /dev/input/event0
```

Press the infrared remote controler,print as the figure below:

```
root@cubieboard2:~# keybinder /dev/input/event0
Reading key input from /dev/input/event0 (sunxi-ir)
Loaded config items
Keycode 85 pressed
Keycode 85 pressed
```

By above may know, the keycode of pressed key is "85". Know the keycode, you can use it to execute the command .For example :

```
#echo "85,shutdown -h now" >>/etc/keybinder.conf
```

The keycode of the key is "85", command is "shutdown -h now", or directly modify the "/etc/keybinder.conf" ,add several configuration in it .Press the keys ,can execute the command.

## 12. LED

### 12.1. Blue LED

Trigger of blue led is defined as "heartbeat", used for indicator system is running .

```
# cat /sys/class/leds/blue\:ph21\:led2/trigger  
none battery-charging-or-full battery-charging battery-full battery-charging-blink-full-solid ac-  
online usb-online mmc0 timer [heartbeat] backlight gpio cpu0 cpu1 default-on
```

Turn off LED

```
#echo none > /sys/class/leds/blue\:ph21\:led2/trigger  
#echo 0 > /sys/class/leds/blue\:ph21\:led2/brightness
```

Turn on LED

```
#echo none > /sys/class/leds/blue\:ph21\:led2/trigger  
#echo 1 > /sys/class/leds/blue\:ph21\:led2/brightness
```

### 12.2. Green LED

Trigger of greed led is defined as "none" and normally on .Users can custom.

```
#cat /sys/class/leds/green\:ph20\:led1/trigger  
[none] battery-charging-or-full battery-charging battery-full battery-charging-blink-full-solid ac-
```



Website: <http://cubieboard.org>  
E-mail: [support@cubietech.com](mailto:support@cubietech.com)

---

online usb-online mmc0 timer heartbeat backlight gpio cpu0 cpu1 default-on

Turn off LED

```
# echo none > /sys/class/leds/green\:ph20\:led1/trigger  
# echo 0 > /sys/class/leds/green\:ph20\:led1/brightness
```

Turn on LED

```
#echo none > /sys/class/leds/green\:ph20\:led1/trigger  
#echo 1 > /sys/class/leds/green\:ph20\:led1/brightness
```

Other trigger: "timer "(timing flashing) 、 "mmc0" (flashing once when insert the TF card )  
、 "battery-charging" 、 " battery-full " and so on .

Warning :the modification will change to the default configuration after the reboot ,you can write the above command into "/etc/init.d/rcS " ,or modify "leds\_para" section in the file name "sys\_config.fex ".

## 13. RTC

Cubieboard2 has no hardware RTC on the . After reboot, the time starts from the default time to go.Connected to Internet the system time will automatically update the calibration.

Manually update the system time :

Change to 11 o 'clock 11 minutes 11 seconds

```
#date -s 11:11:11
```

Change the date on November 11, 2011

```
#date -s 20111111
```




Website: <http://cubieboard.org>  
E-mail: [support@cubietech.com](mailto:support@cubietech.com)

---

## 14. Extension PIN

[http://docs.cubieboard.org/cubieboard1\\_and\\_cubieboard2\\_gpio\\_pin](http://docs.cubieboard.org/cubieboard1_and_cubieboard2_gpio_pin)

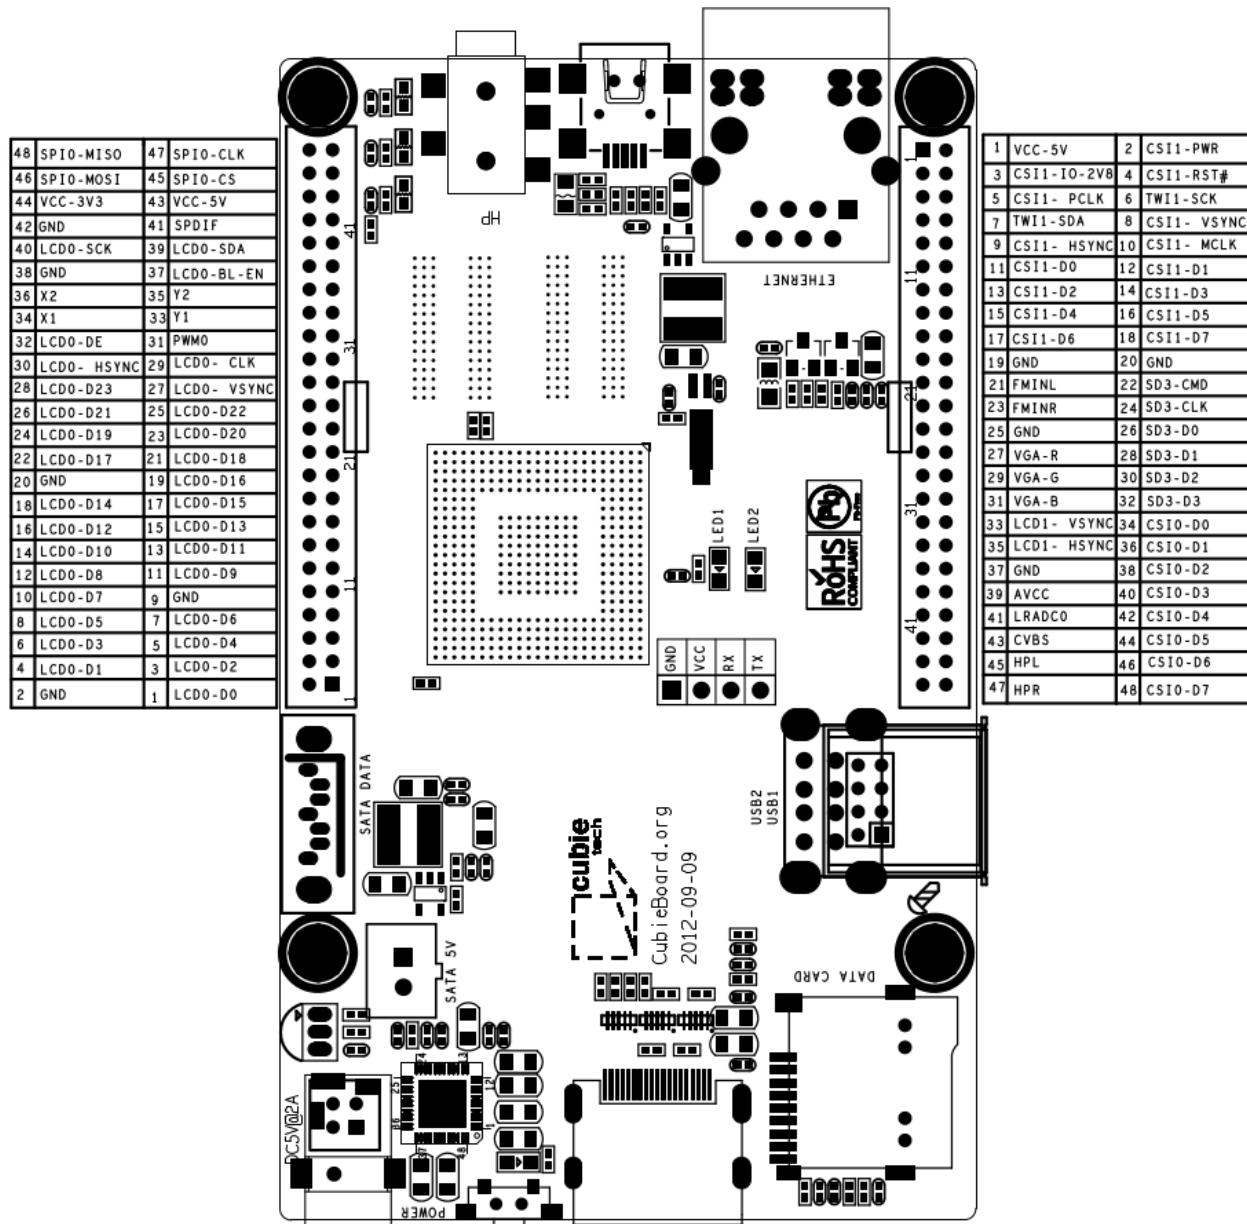

**U14 (Next to SATA connector)**

48	PI13 (SPI0-MISO/UART6-RX/EINT25)
46	PI12 (SPI0-MOSI/UART6-TX/EINT24)
44	3.3V (nc in 2012-08-08)
42	Ground
40	PB10 (LCD0-SCK/LCD-PIO1)
38	Ground
36	XN_TP (TP-X2)
34	XP_TP (TP-X1)
32	PD25 (LCDDE)
30	PD26 (LCDHSYNC)-VGA-HSYNC
28	PD23 (LCDD23)
26	PD21 (LCDD21)
24	PD19 (LCDD19/LVDS1N3)
22	PD17 (LCDD17/LVDS1NC)
20	Ground
18	PD14 (LCDD14/LVDS1P2)
16	PD12 (LCDD12/LVDS1P1)
14	PD10 (LCDD10/LVDS1P0)
12	PD8 (LCDD8/LVDS0P3)
10	PD7 (LCDD7/LVDS0NC)
8	PD5 (LCDD5/LVDS0N2)
6	PD3 (LCDD3/LVDS0N1)
4	PD1 (LCDD1/LVDS0N0)
2	Ground

## SPI0

47 PI11 (SPI0-CLK/UART5-RX/EINT23)

45 PI10 (SPI0-CS/UART5-TX/EINT22)

## LCD

43 VCC-5V

41 SPDIF

39 PB11 (LCD0-SDA/LCD-PIO2)

37 PH7 (LCD0-BL-EN/LCD-PIO0/UART5-RX/EINT7)

35 YN\_TP (TP-Y2)

33 YP\_TP (TP-Y1)

31 PB2 (PWM0)

29 PD24 (LCDCLK)

27 PD27 (LCDVSYNC)-VGA-VSYNC

25 PD22 (LCDD22)

23 PD20 (LCDD20)

21 PD18 (LCDD18/LVDS1P3)

19 PD16 (LCDD16/LVDS1PC)

17 PD15 (LCDD15/LVDS1N2)

15 PD13 (LCDD13/LVDS1N1)

13 PD11 (LCDD11/LVDS1N0)

11 PD9 (LCDD9/LVDS0N3)

9 Ground

7 PD6 (LCDD6/LVDS0PC)

5 PD4 (LCDD4/LNVS0P2)

3 PD2 (LCDD2/LVDS0P1)

1 PD0 (LCDD0/LVDSP0)

### U15 (Between Ethernet port and USB ports)

#### CSI1/TS

1 VCC-5V	2 PH15 (CSI1-PWR/EINT15)
3 CSI1-IO-2V8	4 PH14 (CSI1-RST#/EINT14)
5 PG0 (CSI1-PCLK/SDC1-CMD)	6 PB18 (TWI1-SCK)
7 PB19 (TWI1-SDA)	8 PG3 (CSI1-VSYNC/SDC1-D1)
9 PG2 (CSI1-HSYNC/SDC1-D0)	10 PG1 (CSI1-MCLK/SDC1-CLK)
11 PG4 (CSI1-D0/SDC1-D2)	12 PG5 (CSI1-D1/SDC1-D3)
13 PG6 (CSI1-D2/UART3-TX)	14 PG7 (CSI1-D3/UART3-RX)
15 PG8 (CSI1-D4/UART3-RTS)	16 PG9 (CSI1-D5/UART3-CTS)
17 PG10 (CSI1-D6/UART4-TX)	18 PG11 (CSI1-D7/UART4-RX)
19 Ground	20 Ground

#### Analog

21 FMINL	22 PI4 (SDC3-CMD)
23 FMINR	24 PI5 (SDC3-CLK)
25 Ground	26 PI6 (SDC3-D0)
27 VGA-R	28 PI7 (SDC3-D1)
29 VGA-G	30 PI8 (SDC3-D2)
31 VGA-B	32 PI9 (SDC3-D3)

#### SDIO3

33 LCD1-VSYNC	34 PE4 (CSI0-D0)
35 LCD1-HSYNC	36 PE5 (CSI0-D1)
37 Ground	38 PE6 (CSI0-D2)
39 AVCC	40 PE7 (CSI0-D3)
41 LRADC0	42 PE8 (CSI0-D4)
43 CVBS	44 PE9 (CSI0-D5)
45 HPL	46 PE10 (CSI0-D6)
47 HPR	48 PE11 (CSI0-D7)